

## Data cleanup

Press and hold **[+/-]** buttons together for one second or longer to reset several temporary data points including; AVG Speed/MAX speed/Trip mode/Time mode.

## parameter Setting

The parameter settings showcase the additional adjustments that can be made to the display.

**NOTE:** The parameters are already set to our default settings. We do not recommend adjusting the parameters for your Espin eBike.

To activate parameter setting, double press the **[POWER]** button (interval press less then 0.3 seconds), when in parameter mode the display twinkles.

When inside the parameter settings, short press **[UP/DOWN]** buttons to change the parameter value, and short press **[POWER]** button to switch to the next paramete


To quit the parameter settings, double press **[POWER]** button (interval press less ten 0.3 seconds).

If nothing is done in 10 seconds, the display will return to default view automatically.




### Display brightness

The configuration code is **[bL1]**, press **[+/-]** button to change brightness of the display. display brightness level ranges from 1-5.

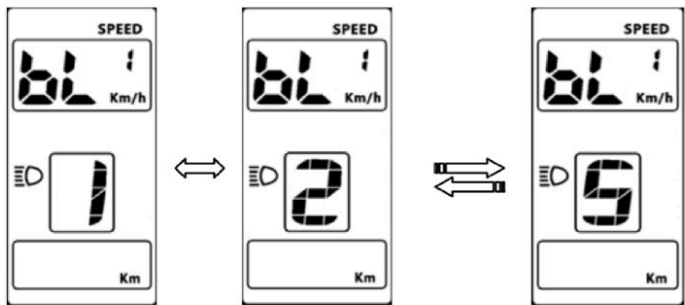

### Automatic time-off

The configuration code is **[OFF]**, press **[+/-]** button to change the value from 1-9, the numbers represent delay time (minutes) before display shuts down automatically. Default value is set at 5 minutes.

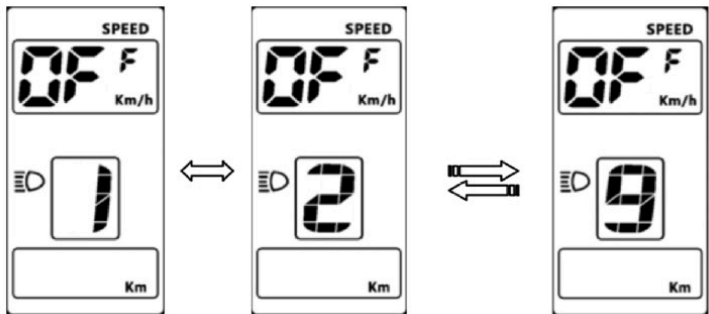

## The order of parameters category is as follows;

- Set speed unit (km/h or mph)
- Display brightness
- Automatic time-off
- Password
- Speed limit settings (do not adjust the pre-set configurations)

### Set Speed Unit (km/h or mph)

The configuration code is **[S7]**, press **[+/-]** button to choose the desired unit (km/h or mph).

