

## **SET SENSOR SENSITIVITY**

With this setting you can define the ratio between rider power and motor support. The sensor sensitivity thereby affects the range (see page 21).

